

Parker

Nib Service

The nib fitted to your Parker pen has been carefully ground and polished by Parker craftsmen to give you utmost writing pleasure. Should you find after a short period of use that it does not suit your hand then we will be pleased to exchange it provided it is undamaged. This service is given free up to *4 weeks after purchase date*. Your nearest Parker retailer will gladly advise you on the choice of a suitable replacement nib and also arrange for the exchange. The illustrations below may serve as a guide to the width of line and writing styles of the most popular nib grades.

Extra Fine

For a fine writing line with light pressure on the nib point.

Fine

Medium

For general purpose use, giving a firm line.

Broad

Fine Oblique

Medium Oblique

Broad Oblique

For those who like a nib cut at a slight angle.

Stub

For thick and thin strokes.

OTHER NIB GRADES ARE AVAILABLE TO SUIT SPECIAL REQUIREMENTS.

Parker

SOME USEFUL INFORMATION ON HOW TO OBTAIN THE BEST SERVICE FROM YOUR Parker

1. Correct filling of your Parker is most important to ensure best performance. Follow the filling instructions carefully.
2. Always use good quality ink. We recommend Parker Quink. In addition to being chemically pure, Quink contains Solv-x which helps to keep your Parker clean and trouble free. Low quality inks are harmful to pens. When changing inks the old ink should be thoroughly washed out.
3. Your Parker should be flushed out occasionally with clean cold water. This removes dust that may accumulate around the point of the nib and feed, causing restriction of the ink flow.
4. The outer cap should always be replaced when your Parker is not in use. The cap should be screwed on *tightly* to prevent the ink drying on the nib point.
5. When carrying your Parker it should be kept upright in the pocket or handbag.
6. If your Parker does not appear to be working properly consult a Parker retailer. He will be only too pleased to advise you, or if your pen needs adjusting or servicing, to forward it to our Service Department.



The Parker Pen Company Limited
BUSH HOUSE, LONDON

Parker

DUOFOLD · VICTORY · SLIMFOLD


Pens Pencils & Ballpoints

FILLING & OPERATING

Instructions




To Fill Your DUOFOLD · VICTORY · SLIMFOLD

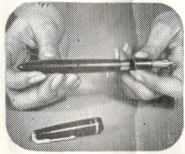

1. Unscrew the outer cap. Hold section and remove the barrel by unscrewing it anti-clockwise.



2. Immerse the nib completely in ink. Press ribbed bar firmly at least five times.

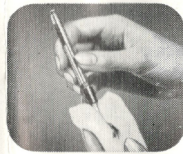

3. Wipe off surplus ink from the nib and feed with a soft cloth.

USE PARKER QUINK

THE INK THAT CLEANS YOUR PEN AS YOU WRITE

To Load Your PARKER PROPEL-REPEL PENCIL




1. Spare refill leads are carried in the pencil magazine. To obtain a lead, pull off cap and remove eraser.



2. Propel mechanism by holding barrel and turning cap clockwise until all remaining lead is ejected. When mechanism is empty, knockout pin will show at tip.

Repel mechanism by turning cap anti-clockwise until it stops. (Do not strain.) Insert new lead into the point and push it down until it disappears.

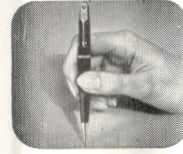


3. Propel mechanism slowly until $\frac{1}{8}$ " of lead is exposed. Press lead against firm surface to seat it in the clutch. Pencil is now ready for use.


To Operate and Refill Your PARKER BALLPOINT



1. The Parker Ballpoint operates with a simple one-handed action. To extend the point, hold your ballpoint as illustrated and depress the cap with the thumb. A similar action retracts the point.

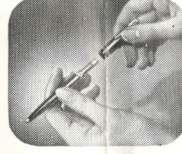

2. To fit a new refill, hold barrel and unscrew cap by turning it anti-clockwise.

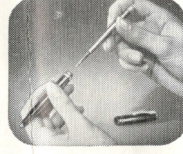


3. Pull out empty cartridge. Fit new refill, replace the cap and screw it up tightly. Note.—If the small operating spring should come out with the used cartridge, fit it over the point of the new refill.

Refills are available in two ink colours, Blue and Red.

To start THE INK FLOW


The precision fit of the ball to the ballseat in Parker refills regulates the flow of ink to the paper. If a ballpoint has been out of use for some time the ink film on the ball may have dried off but the flow can be quickly started by rotating the ball on its axis on a pad of paper.

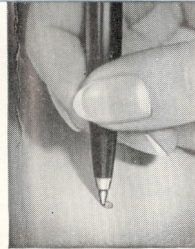

Why there is a space

AT THE TOP OF THE RESERVOIR AFTER FILLING

The filling mechanism of the Duofold, Victory and Slimfold pens is simple to operate and highly efficient. When the pen is filled the ink level in the reservoir should reach a point approximately half an inch from the top. The unfilled space allows for drainback of ink from the feed channels after filling and also for air expansion within the reservoir.

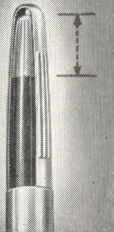

USE PARKER "WRITEFINE" LEADS

Parker

ALL PARKER WRITING EQUIPMENT IS SOLD TO THE PUBLIC ON THE UNDERSTANDING THAT THE COMPANY AGREES TO CORRECT, WITHOUT CHARGE, ANY DEFECT IN MATERIALS OR WORKMANSHIP THAT IS REVEALED WITHIN ONE YEAR OF PURCHASE.