

Guarantee

★
WEAREVER

PACEMAKER

FOUNTAIN PEN

with Replace-A-Point

This guarantee covers the replacement of any part of the pen which shows a defect in construction or material.

Any part broken by accident or ill usage will be replaced at prevailing parts prices, plus a 25¢ charge for handling and postage.

The Wearever Pacemaker Pen is a precision instrument and must never be taken apart.

DAVID KAHN, INC., North Bergen, N. J., U. S. A.

World's Largest Pen Maker

Made in U.S.A.

★Reg. U. S. Pat. Off.

**WEAREVER Replace-A-Points
for Pacemaker Pen**

(specify by number)

No. R41 Extra Fine

No. R42 Flexible Fine

No. R43 Medium Flexible

No. R47 Medium Firm

No. R44 Broad

No. R45 Steno

HOW TO GET PERFECT SERVICE FROM YOUR WEAREVER PEN


TO FILL — Have a clean bottle of ink. Be sure there is enough ink to completely cover the pen point. Raise lever to horizontal position. Snap lever back to its original closed position. Hold pen in ink for 15 seconds, to fill sac to maximum capacity. Withdraw pen, wipe off surplus ink, and pen is ready for use.

TO CLEAN — Flush your pen with ink several times. If pen has not been used for some time and the ink has dried, follow the general filling instructions above EXCEPT to use cold water instead of ink. This should also be done when changing inks. Allow pen to dry before filling with fresh ink.

TO INSERT NEW REPLACE-A-POINT — Be sure there is no ink in pen. Cover old point with piece of tissue, hold the point and unscrew it, using a counter-clockwise motion (to the left). Insert new Replace-A-Point and screw in by means of a clockwise motion (to the right).

TO REMOVE CAP — Unscrew by usual counter-clockwise motion. Use reverse motion when replacing cap. Keep cap on securely when pen is not in use. Always hold pen with point up when removing or replacing cap.

DO'S AND DON'TS — Always keep your pen filled. A pen with little ink is more likely to flood or feed too freely. Always keep cap on pen when not in use. This keeps point moist with ink so that it will start to write instantly. Always keep pen upright to prevent flooding of inner cap. Use clip to hold pen in pocket, handbag or purse. Never raise the lever unless you hold pen over an ink bottle.

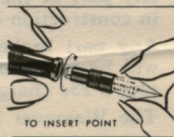

TO INSERT POINT